LG

Life's Good

ENGLISH

USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

CE 0168

USER GUIDE

This manual may differ from the phone depending on the phone software version and service provider used.

Model Series : KG 27x

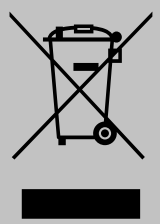

Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately.
3. Disposing of your old appliance correctly is better for the environment and personal health.
4. For more information about disposal of your old appliance, please contact your local council, waste disposal service or the shop you purchased the product.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you provided with a plug-in SIM and loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

- *The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.*

Illustrations

1 **2** Open battery cover
3 Insert your SIM
4 Close the battery cover
5 Charge your battery

1

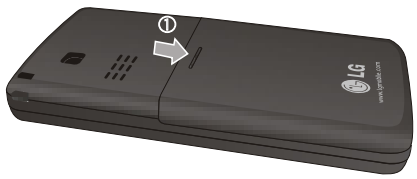

2

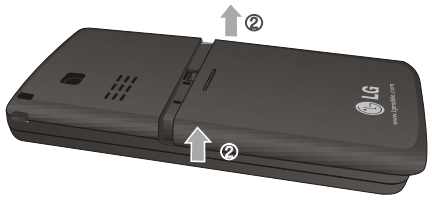

3

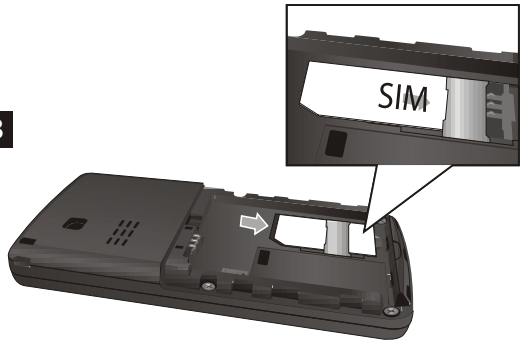

4

5

Fully charge the
battery before using it for the first time.

Phone Components

Earpiece

Display screen

Soft keys

Each of these keys performs the functions indicated by the text on the display immediately above them.

Model Specific

: Send Key

You can dial a phone number and answer incoming calls.

: End/Power key

Allows you to power the phone on or off, end calls, or return to Standby Mode.

Alphanumeric keys

These keys are used to dial a number in standby mode and to enter numbers on characters in edit mode.

: Navigation key

Use for quick access to phone functions.

Display Information

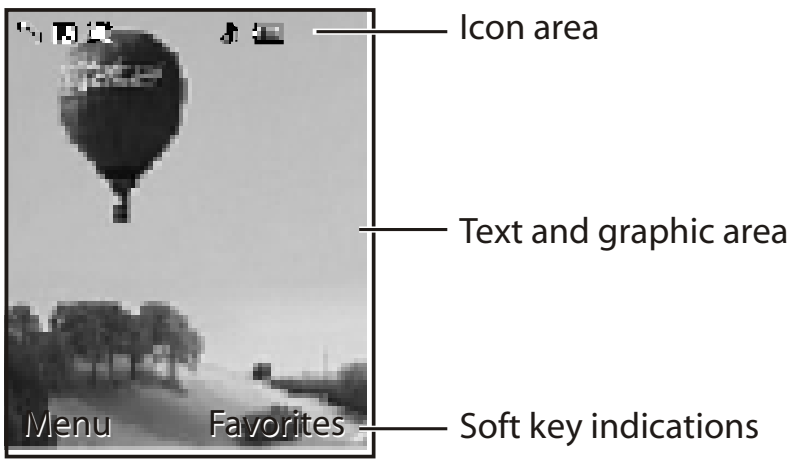

On-Screen Icons

The table below describes various display indicators or icons that appear on the phones display screen.

	Tells you the strength of the network signal.
	Call is connected.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	Vibrate only menu in profile.
	General menu in profile.
	Outdoor menu in profile.
	Silent menu in profile.
	Headset menu in profile.
	You can view your schedule.

Turning Your Phone On and Off

1. Hold down the [END] key until the phone switches on.
2. To switch the phone off, hold down the [END] key until the power-off image displays.

Making a Call

1. Enter a phone number including the area code.
2. Press the [SEND] key to call the number.
3. When finished, press the [END] key.

Answering a Call

1. When the phone rings and the phone icon flashes on the screen, press the [SEND] key or the left soft key to answer.
2. If the Any Key menu option (Menu 4.5.2.1), has been set, any key press will answer a call except for the [END] key or the right soft key.
3. End the call by pressing the [END] key.

Note

- After the call ends, the phone will go back to standby mode.

Making an international call

1. Press and hold the 0 + key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [SEND] key to call the number

Menu and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed via the left and right soft keys.
The label on the bottom of the display screen immediately above the soft keys indicates their current function.

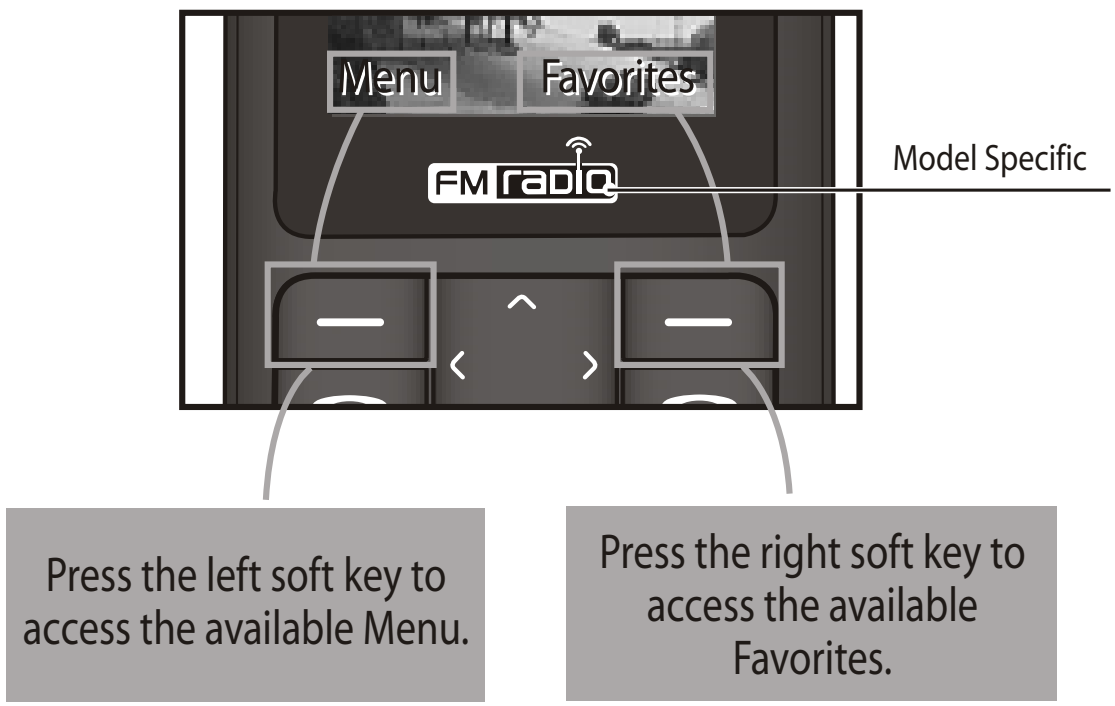
Menu
Favorites
FM radio
Model Specific
Press the left soft key to access the available Menu.
Press the right soft key to access the available Favorites.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. To change modes, press the # key.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

Symbol Mode

This mode allows you to enter special characters by pressing * key.

FM Radio* (This function may be different in different regions.)

1. Press the corresponding number key of a channel to store the selected radio station.
2. After presetting radio channels, you can listen to another channel by pressing the corresponding number key.
3. You can access the following option menus by pressing the left soft key [Options].
   - **Edit channel:** You can adjust frequency and channel 0.1 MHz at a time using the Left/Right navigation keys and number keys.
   - **Auto scan:** If you turn "Auto Scan Now?" on, this automatically sets the radio channel. When "Save this Station?" message pops up and you select Yes, the selected frequency will be stored.
   - **Reset channels:** You can delete all channels you saved.
   - **Listen via speaker:** Select this to listen to the radio through the built-in speaker. To turn off the speaker, select "Listen via headset" in the [Options].

* - Model Specific

How to set the tone

Ringtone

1. press the left soft key [Menu] and select [Settings - Profiles] using the up/down navigation keys.
2. Select [Personalise] and choose Ringtones menu.
3. Press the left soft key [OK] and then you can set the desired ringtone.

Tip

- If you want to change your ringer to vibrate, select Vibrate mode or press and hold the upper navigation key.

Ringtone/Keypad/Message/Call alert tones and volumes

You can select Ringtone/Kepad/Message/Call alert tones and volumes.
You can change the sound that will occur when a key is pressed, or volume level.
[Menu - Settings - Profiles - Personalise]

Menu tree

- **Messaging**
  - New message
  - Inbox
  - Drafts
  - Outbox
  - Sent
  - Listen voice mail
  - Info message
  - Templates
  - Settings
- **Contacts**
  - Search
  - New contact
  - Speed dials
  - Copy all
  - Delete all
  - Memory status
  - Information
- **Call history**
  - All calls
  - Missed calls
  - Dialled calls
  - Received calls
  - Call duration

- **Settings**
  - Profiles
  - Date & Time
  - Language
  - Display
  - Call
  - Auto keylock
  - Security
  - Power save
  - Network selection
  - Reset settings
  - * Memory status

- **Alarm**

  This menu will help you wake up on time and remind you of your preset schedule.

- **Organizer**
  - Calendar
  - Memo

- **Radio (Model Specific)**

  You can search for radio stations and enjoy listening to the radio.

- **Tools**
  - Calculator
  - Stopwatch
  - Unit Converter
  - World clock
  - Lost Mobile Track

Quick feature reference

This section provides brief explanations of features on your phone.

Messaging Menu 1

This menu includes functions related to SMS (Short Message Services).

New message	This menu includes functions related to SMS (Short Message Services).
Inbox	You will be alerted when you have received a message.
Drafts	This menu shows the present message list.
Outbox	This menu allows to view the message which is about to be sent or has failed to be sent.
Sent	This menu allows to view the message which have already been sent, including time and content.
Voice mail	This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).
Info message	Info service messages are text messages delivered by the network to your handset.
Templates	There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
Settings	This menu allows you to set features of your network service provider.

Contacts Menu 2

Search You can Search for contacts in Phonebook.

Note: *Instant searching is available by inputting the initial letter of the name you want to search.*

New contact You can add phonebook entries by using this menu.

Speed dials Assign contacts to any of keys 2 abc and 9 wxyz .

Copy all You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.

Delete all You can delete all entries from SIM card memory or Phone memory.

Memory Status You can check free space and memory usage.

Information

- **Service dial numbers :** Access the list of service numbers assigned by service provider safely.
- **Own numbers :** You can save and check your own numbers in SIM card.
- **Business card :** This option allows you to create your own business card featuring your name, mobile phone number and so on.

Call history Menu 3

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations.

Call history Menu 3 **(Continued)**

All calls	Displays all the lists of three types (Received/Dialed/Missed calls) by time.
Received calls	This option lets you view the last 10 incoming calls.
Dialled calls	This option lets you view the last 10 outgoing calls (called or attempted).
Missed calls	This option lets you view the last 10 unanswered calls.
Call duration	Allows you to view the duration of your incoming and outgoing calls.

Settings Menu 4

You can set the following menus for your convenience and preferences.

Profiles	You can adjust and customize the phone tones.
Date & Time	You can set functions relating to the date and time.
Language	You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
Display	You can change settings for the phone display.
Call	You can set the menu relevant to a call.
Auto keylock	Your phone is default Auto Keylocked. To unlock go to Settings-Auto Keylock - off.

Settings Menu 4 **(Continued)**

Security

This menu allows you to set the phone safely.

- **PIN code request :** You can set the phone to ask for the PIN code of your SIM card when the phone is switched on.
- **Phone lock :** You can use a security code to avoid unauthorized use of the phone.
- **Call barring :** The Call barring service prevents your phone from making or receiving a certain category of calls. This function requires the call barring password.
- **Fixed dial number (SIM dependent) :** You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN 2 code. The numbers you wish to allow access to once this service has been enabled, must be added to the contacts after enabling fixed dial number.
- **Change codes :** PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes : Security code, PIN code, PIN2 code.

Power save

If you set this to On, you can save the power when you are not using the phone.

Network selection

You can select a network that will be registered either automatically or manually. Usually, the network selection is set to Automatic.

Reset settings

You can initialize all setting values as defaults. You need a Security code to activate this function.

Memory status

You can check free space and memory usage of each repository.

Alarm Menu 5

Allows you to set one of three alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, the Alarm icon will be displayed on the LCD screen and the alarm will sound.

Organizer Menu 6

Calendar When you enter this menu a calendar will pop up. On top of the screen there are sections for dates. Whenever you change the date, the calendar will be updated accordingly. If you see a marked date in the calendar, it means that there is a schedule that day. This function helps to remind you of your schedule. The phone will sound an alarm tone if you set this for the note. See the upper left for further details.

Memo You can create a list of tasks.

Radio

You can search radio stations and enjoy listening to the radio.

Tools

Calculator This contains the standard functions such as +, -, x, ÷ : **Addition, Subtraction, Multiplication** and **Division**.

Stopwatch Stopwatch is available just as common stopwatches we see and use in daily life.

Unit Converter This converts any measurement into a unit you want.

World clock Allows you to determine the current time in another time zone or country.

Lost Mobile Track Helps to track your phone, when it is lost, if LMT is enabled.
Step 1:- Go to Menu-Tools-Lost Mobile Track
Step 2:- Press OK to change settings-->Input default LMT code 0000 (If you wish to change the LMT code, select Change LMT code - Input Old LMT code - Input New LMT code -Repeat the new code)
Step 3:- Set LMT On
Step 4:- Your phone has an option to enter two numbers whom you would like to inform about your lost phone. Enter Name & Numbers (2 entries). Initially, the message (IMEI no. along with the new mobile phone no) will be sent immediately after powering on the handset with new SIM card and later after every 12 hours.

❑ Guidelines for safe and efficient use

Please read these simple guidelines. Ignoring them may be dangerous or illegal. Further detailed information is given in this manual.

Warning

› For your safety, use ONLY specified ORIGINAL batteries and chargers.
› Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
› Batteries should be disposed of in accordance with relevant legislation.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

› Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
› The unit should be kept away from heat sources such as radiators or cookers.
› Use a dry cloth to clean the exterior of the unit. (Do not use any solvents).
› Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

❑ Guidelines for safe and efficient use (Continued)

Fuse replacement

Always replace a blown fuse with a fuse of the same type and size. Never use a fuse of a higher rating.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

› Hold the phone as you would any other telephone.

Electronic devices

All mobile phones may get interference, which could affect performance.

› Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

› Do not use a hand-held phone while driving.
Use a hands-free kit, if available.
Pull off the road and park before making or answering a call if driving conditions so require.

❑ Guidelines for safe and efficient use (Continued)

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

In aircraft

Wireless devices can cause interference in aircraft.

› Turn off your mobile phone before boarding any aircraft.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

❑ Guidelines for safe and efficient use (Continued)

Battery information and care

› You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
› Use only LG batteries and charges. LG chargers are designed to maximize the battery life.
› Do not disassemble or short-circuit the battery pack.
› Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
› Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
› Risk of explosion if battery is replaced by an incorrect type.
› Dispose of used batteries according to the manufacturer's instructions.

❑ Guidelines for safe and efficient use (Continued)

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-lonizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.956 W/kg (10g0.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg average over one (1) gram of tissue.

❑ Technical Data

General

› **System :** GSM 900 / DCS 1800

Ambient Temperatures

› Max. : +55^{0}C
› Min : -10^{0}C

Talk Time *

› Upto 3 hrs. 30 min. (PL : 7)

Standby Time *

› Upto 350 hrs. (PG : 9)
* - Network dependent (may vary)

❑ Disclaimer

The product design and features mentioned in the manual can be different from real product without previous notice.
LG Electronics is not liable for any claims whatsoever, AoC pop up is network dependent in a prepaid SIM card. The Lost Mobile Tracker feature will not operate if - the LMT feature is not activated as per the given instructions / the handset is physically damaged / water logged / a different SIM is not inserted / there is no credit balance in a pre-paid SIM Card / the phone is out of network area / the new SIM Card malfunctions / the new user has changed the Mobile Tracker settings / handset is software upgraded / non GID-A SIM Cards are used on GID locked handset.

Declaration of Conformity

LG Electronics

CE 0168

MEMO

MEMO

LG XMOBILES 3G LEADER

EVERY HAND WANTS ONE

*Source : Wall Street Journal (10.11.2004)

LG Life's Good

WARRANTY CARD

This LG handset and charger comes with a 12-month warranty from date of purchase or 15 months from manufacturing date of corresponding IMEI No. Of the unit whichever is earlier, against defect in material or workmanship. In case of a defect, LG Electronics India Pvt. Ltd. undertakes to get the set repaired free of charge through its authorised service centre (ASC) or service dealer subject to following conditions:

Terms and Conditions

1. This warranty is applicable to the first purchase and in no case it can be transferred or extended.
2. Repair of this product will be carried out on a carry in basis to the nearest ASC.
3. While the company will make every effort to carry out repairs at the earliest, it however is made explicitly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised ASC/ service dealer reserves the right to retain any parts of the component/s replaced at its discretion. In the event of a defect being noticed in the equipment during the warranty period.
5. This warranty entitles the purchaser to free of cost repairs of the unit within warranty period and does not entitle for replacement or refund of entire unit. Claims, if any, to this warranty shall in no case exceed the purchase price of the unit.
6. In case of any software upgradation of the phone, no warranty is provided on phone memory or phone book.
7. The warranty is void in case the serial no./ IMEI no. is tampered / disfigured or details in the warranty card are not properly filled up at the time of purchase.
8. This warranty is not valid for damages resulting due to negligence, mishandling, improper use, tampering, breakage, soaking, fire, unauthorised repair and failure due to network upgrades.
9. Batteries are covered under warranty for a period of 6 months from date of purchase or 9 months from date of corresponding IMEI no. of the unit whichever is earlier
10. Warranty does not cover accessories external to the equipment supplied by the dealer.
11. The Delhi / New Delhi courts shall have the jurisdiction to try any dispute and /or suits related to or arising out of this agreement.

Customer Information Center/ Call Center Number

For any query related to the after sales service and customer support please contact us at the numbers listed below.

CITY NAME	CONTACT NO
Ahmedabad	079-26461603
Bangalore	080-39889999
Bhopal	0755-2768650
Bhubaneswar	0674-2435999
Calcutta	033-22272505
Chandigarh	0172- 5087389/90
Chennai	044-28220370
Coimbatore	0422-2238602
Delhi + NCR	011-26145000/39889999
Hyderabad	040-23231448
Jaipur	0141-2365264
Lucknow	0522-2635535
Mumbai + Thane	022-24930044/39889999
Patna	0612-2221694
Pune	020-56031555

ALL INDIA BSNL/MTNL SUBSCRIBERS CALL: 1800 180 9999

BRANCH ADDRESSES

Sl. No.	Branch	Branch Office Address	STD Code	Landlines No.	Reliance No.
1.	Ahemdabad	LGEIL, 101 - 102, Narayan complex, Near Navrangpura Bus stand, Navrangpura Ahemdabad - 380 009	079	26562794, 2607633, 34, 35	30928467, 30928471
2.	Asansol	LGEIL, Block - E, 1st Floor, P C Chatterjee Market, Rambhandu Tala, GT Road (E), Asansol - 713303	0341	2215170	
3.	Aurangabad	LGEIL, 207 - B, Tapadiya Super Market, Nirala Bazaar Road, Samartha Nagar, Aurangabad - 431005	0240	2344705	
4.	Bhatinda	LGEIL, 142, C/O Pipul Care Centre, Bibi Wala Road Bhatinda	0164	2222448	
5.	Bangalore	LGEIL, 93, TKN Mansion, Ground Flr, KH House, Bangalore - 560027	080	51145145	30910754, 30910753
6.	Bhopal	LGEIL,3 Malik warehouse , J K Road, Bhopal	0755	5262847, 5262848	3092938, 3959804
7.	Bhubneshwar	LGEIL, Plot No. 02, 1st Floor, Bapuji nagar, Bhubneshwar - 751009	0674	2531430, 2534280	3866525, 3966528
8.	Calcutta	LGEIL, 1, Ho - chi - min Sarani, 6th Floor, Metro Towers, Calcutta -700071	033	22883250/ 51	3959595, 3959596
9.	Chennai	LGEIL, AA11, 2nd Avenue, Fatima Tower, Anna Nagar West, Chennai - 600040	044	55510500 - 04	30924478, 30924479
10.	Cochin	LGEIL, 40 /1270, Vasudeva buildings, T.D. Road, Ernakulum Cochin - 682011		2368966, 2370744	3946877, 3946878
11.	Coimbatore	LGEIL, 250a, Sanganur Main Road, Kannappa Nagar, Coimbatore - 641027	0422	2332506, 2331862	3094613, 3094573
12.	Delhi - South & East	LGEIL, 221, Okhla Industrial Area, phase 3, New Delhi	011	26830953, 26837347	30989283, 30989365/ 66/ 67, 30989278, 30989358
13.	Delhi - North & West	LGEIL, 28, Main Shivaji Marg, Near Modi Nagar Police station, New Delhi	011	9873002340/ 9873002339	30997397, 30997511
14.	Dehra Dun	LGEIL, M 22, Mobbewala Tata Commercial compound, Dehra Dun Saharan pur road	0135	2644213, 2644283	3093412, 3093411
15.	Goa	LGEIL, Plot no. D3-D4, Rego Baug, Alto, Santa Crutz, Bambolin, Goa-403	0832	3094759, 3094955, 3094956	
16.	Gurgaon	LGEIL, 2nd Floor, A Block, Centre Point Building, Sushant Lok, Gurgaon	0124	5047461/62/63	3950019, 3099959
17.	Ghaziabad	LGEIL, J-10, RDC, Rajnagar, Ghaziabad	0120	2722973, 27246686,	3943465-67
18.	Guwahati	LGEIL, Shantineer Bhawan, CK Aggarwal Path, Chenikurthi, Guawahati- 781003	0361	2668984, 2662896, 2663895, 2665983, 2666958	
19.	Hyderabad	LGEIL, K/ 1/ 1, IDA, Uppal, Hyderabad-500039	040	27207504, 05, 06	30921140
20.	Hubli	LGEIL, 603/1B, Ravi Nagar Road, Behind Renuka Petrol Pump, Gokul Road, Hubli-580030	0836	2337251, 2337252	3090749, 3090651
21.	Indore	LGEIL, 3rd Flr, 304 Bansi Trade Centre, 581/5, M.G. Road, Indore-452003	0731	5065523/24	3956060, 3956065
22.	Jaipur	LGEIL, B-71, Shankar Marg, Lal Kothi Scheme, Jaipur-302015	0141	2741553, 2742639	3951458, 3951478
23.	Jallandhar	LGEIL, Opp Jassi Market, Village Khajuria, Near TVS Godown Jallandhar-Phagwada, G T Road, Jallandhar	01824	502667/68	502668
24.	Jammu	LGEIL, Plot No.-52, Transport Nagar, Narwal, Jammu	0191	2477420, 2477419, 2474396, 2474384	
25.	Jodhpur	22(1-A), RIICO Heavy Industrial Area, Jodhpur-342003	0291	2742403, 2742384	
26.	Kundli	LGEIL, Sunshine Enterprises, Sunder Cold Storage, GT Karnal Road, Kundli-Sonepat	0130	2219201,2219202	30997371,30997496
27.	Kozhikode	LGEIL ,11/434, ERANHIKKAL Bldgs , Cherooty Road, Khozikode -673001 Kerala.	0495	2366755, 2366756, 2366678	3955567,3955568
28.	Lucknow	LGEIL, 537,Hari Kunj, Keshav Nagar, Sitapur Road Lukhnow	0522	2757538,39, 58,59	3951507/8/9
29.	Ludhiana	LGEIL, Village Jhande,Near Badowal Railway Station,Opp ferozpur Road Ludhiana.	0161	2804412 - 15	3959985
30.	Madurai	LGEIL, 7-1-54, Jothimal Godown Madurai Highroad,Paravai, Madurai-625402 Tamilnadu.	0452	2463007, 2464016	
31.	Mumbai - North & South	LGEIL, Unit No.3,L Wing,2nd Flr., Tax Center, Off Saki Vihar Road, Chandiwali, Andheri(E), Mumbai- 400072	022	28472410-14	39522108 ,39516172
32.	Nagpur	LGEIL, 5a,Road No.13,Behind Msrtc Workshop, MIDC Hinga, Nagpur-440016	07104	235120, 235122	3092641,3092642
33.	Patna	LGEIL, B-8, Shakra Manzil, S K Puri, Patna.	0612	2204845	3098714,3099156
34.	Pune	LGEIL, 105/106, Pride Silicon Plaza, Senapati Bapat Road, Pune-411016	020	56030736,56030732/33/34	30922960,30967366,30915833,30967635
35.	Raipur	LGEIL, Nathani Compound, Shyam Nagar, Katora Talab, Raipur(C.G)	0771	5037470, 5053171	3959707,3959708
36.	Ranchi	LGEIL,402,Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi	0651	2331519, 2331815	3090426
37.	Rajkot	LGEIL301, 302 Dhanrajni , Dr. Yagnik Road, Rajkot - 360001	0281	2481499,2467692	3094093,3094096
38.	Surat	LGEIL1001-1004,Ascon Plaza, IInd Flr, Anand Mahal Road, Behind Bhulka Bhavan School,Adajan,Surat-395009	0261	2730982 - 85	3954419
39.	Thane	LGEIL,Ad-1-13,Rajlaxmi Commercial Complex,Village-Kalher, Thane- Bhiwandi Highway Dist.-Thane-421302	02522	277497/277559	39526264
40.	Tirupati	LGEIL, 19-3-13/M4, Behind Hero Honda Showroom, Renugunta Road, Tirupati - 517501	0877	2282306 /08	
41.	Varanasi	LGEIPL, Shree Ganga Keramos Compound,Lahartara Road, Shivdaspur, Manduadih, Varanasi	0542	2373919	3091773, 1774, 98398 000 00
42.	Vijaywada	LGEIL, 1st Floor, Yalamanchili Complex, Ring Road, Near Executive Club, Vijay wada - 520008	0866	2450128	3954419

Dealer name with stamp ..... Dealer address .....

IMEI No. ..... Date of sale ..... Serial no.....

LG Electronics India Pvt. Ltd., Plot No. 51, Udyog Vihar, Surajpur Kasna Road, Greater Noida, U.P.

USER GUIDE

LG Electronics Inc.

http://www.lge.com

P/N : MMBB0240811 (1.3)